

Sony Remote RMT-V501e

Follow these steps to program the remote control to operate a television.

1. Turn on the television to be programmed.
2. On the remote control, move the **TV/DVD VIDEO** switch to **TV**.
3. Press and hold the **I/O** button.
4. While holding the **I/O** button, enter the television manufacturer code number using the number pad.

NOTE: *If more than one code number is listed for the manufacturer, enter one code at a time until you find one that works.*

5. Release the **I/O** button.
6. Point the remote control at the television.
7. Press the **POWER** button to verify operation.

NOTES:

- *If a new code number is entered, the code number previously entered will be erased.*
- *When the batteries are replaced, the programmed codes may be erased. It may be necessary to reprogram the remote after replacing the batteries.*
- *Some product functions may not be able to be controlled by the remote control. Use the remote control provided with the component.*
- *In some rare cases, you may not be able to operate your non-Sony equipment with the supplied remote control. This is because your equipment may use a code that is not provided with this remote control. In this case, please use the equipment's own remote control.*